

MacBook Core Duo Logic Board Replacement



Step 1 Battery

- Use a coin to rotate the battery-locking screw 90 degrees clockwise.



Step 2

- Lift the battery out of the computer.



Step 3 Memory Cover

- Remove the three evenly-spaced Phillips screws from along the rear wall of the battery compartment.
- The screws are captive to the metal memory cover.