

## PREFACE

This manual covers the construction, function and servicing procedure of the Honda BF9.9A, BF15A outboard motors. Careful observance of these instructions will result in better, safer service work.

Illustrations in this manual are based primarily on the BF15A LCS.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.  
SERVICE PUBLICATIONS OFFICE

## CONTENTS

<b>SPECIFICATIONS</b>	<b>1</b>
<b>SERVICE INFORMATION</b>	<b>2</b>
<b>MAINTENANCE</b>	<b>3</b>
<b>DISASSEMBLY CHART</b>	<b>4</b>
<b>RECOIL STARTER</b>	<b>5</b>
<b>FUEL SYSTEM, THERMOSTAT</b>	<b>6</b>
<b>FLYWHEEL ELECTRICAL</b>	<b>7</b>
<b>ENGINE REMOVAL/INSTALLATION</b>	<b>8</b>
<b>CYLINDER HEAD, TIMING BELT</b>	<b>9</b>
<b>CYLINDER BARREL, CRANKSHAFT, PISTON</b>	<b>10</b>
<b>HANDLEBAR, SHIFT LEVER</b>	<b>11</b>
<b>EXTENSION CASE, GEAR CASE, WATER PUMP</b>	<b>12</b>
<b>STERN BRACKET, SWIVEL CASE</b>	<b>13</b>
<b>OPTIONAL PARTS</b>	<b>14</b>
<b>OPERATION</b>	<b>15</b>
<b>SUPPLEMENT</b>	