


Drive a new bearing into the housing.

TOOLS:

Driver	07749-0010000
Attachment, 52 x 55 mm	07746-0010400
Pilot, 32 mm	07MAD-PR90200

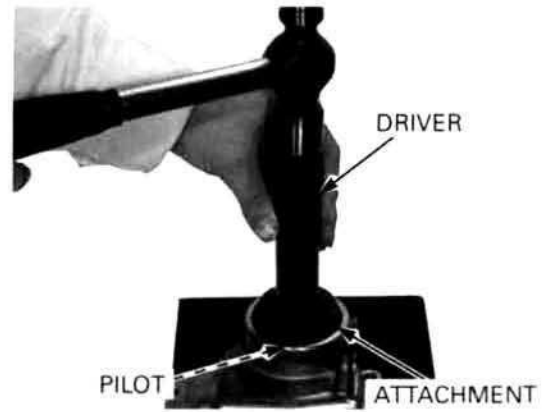

Install the snap ring into the housing groove securely with the chamfered edge facing the bearing.

Pack the seal lips of a new oil seal with grease. Install the oil seal so that its rubber area flush with the housing end.




Be careful not to damage the oil seal lips.

Hold the bearing inner race and press the pinion joint into the bearing until it is fully seated.

TOOLS:

Fork seal driver weight	07747-0010100
Driver attachment, 33 mm I.D.	07747-0010501
	or
Driver attachment	07HMD-MR70100

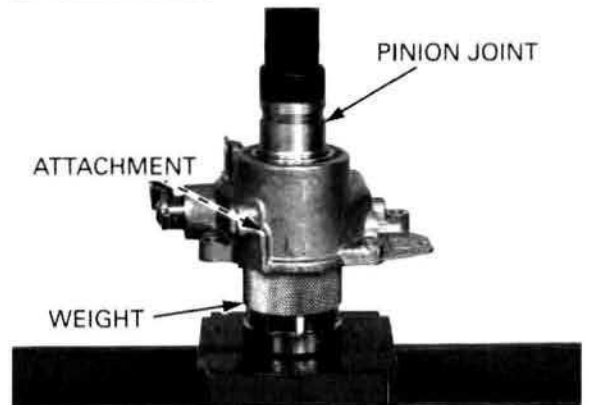

Install the snap ring into the pinion joint groove securely with the chamfered edge facing the bearing.

