



Hub Replacement

NOTE:

- Use only genuine Honda aluminum wheel weights. Non-genuine aluminum wheel weights may corrode and damage aluminum wheels.
- Remove the center cap by prying it out with a flat screwdriver. Avoid damage to the cap by not allowing it to fall during removal.
- Before installing the wheel, clean the mating surfaces of the brake disc and inside of the wheel.

CAUTION: Use a rag at the point you are going to pry, because aluminum alloy wheels can be easily damaged.

☆ Corrosion resistant bolt/nut.

