




TZ010B

■NOTE: Do not over-tighten the shock absorber cap screw as the shock eyelet must be free to pivot.



TZ008

■NOTE: Install the rear arm springs onto the adjuster blocks after the skid frame has been installed.

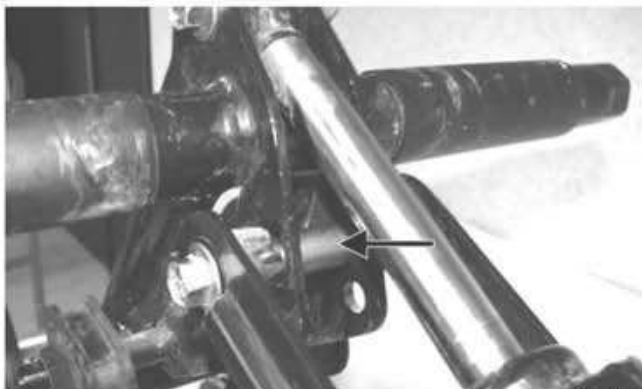

TZ020A


■NOTE: Be sure that the spacer is installed between the brackets of the idler arm before securing the shock links.

7. Slide the sleeve and spring onto the idler arm.



TZ021

9. With a suitable driving tool, install the rear upper idler wheel on the idler arm.

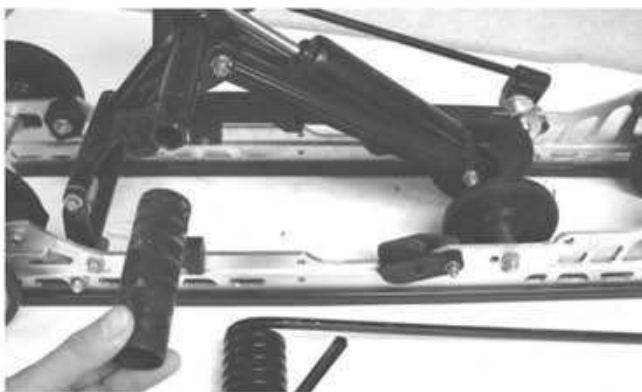

TZ009

8. Place the spring slide and slide block (with spring in slide block) into position on the slide rail. Secure with a cap screw and washer. Tighten to 20 ft-lb.



TZ022

⚠ CAUTION

When driving the idler wheel onto the idler arm, use a tool to contact the inside race of the bearing or damage to the wheel or bearing may occur.